

DaHua Quick Reference (Pre Config):

Login to DVR or NVR and Intercom default password:

User name 888888, password is 888888

User name : admin , password : dh888888

For Intercom password: 002236; 123456; 888888

- Add user for each device:

- From Main Menu->SYSTEM->ACCOUNT

- Add user: Example: user1234 password: abcd1234

- At the same time you can modify or delete a user

- Set up P2P on Recorder:

1. From main menu-> setting->network-> TCP/IP, Setup static ip or DHCP

2. From main menu -> Setting-> Network-> P2P or Easy4ip, TICK the box to enable P2P function, and make sure status "online" or "Connect success"

- Download APP at Mobile:

- Download Iphone free app is "idmss plus"

- Android app is "gdmss plus"

- Pad app is "idmss HD or gdmss HD"

- For Pc, download "smartpss" from www.dahuasecurity.com

- Set up P2P on Mobile:

Home => Device => + Add => Scan: Scan QR Code under of recorder OR from the P2P setting

(main menu -> Setting-> Network-> P2P) => Next => Choose your device model:

NVR/DVR/XVR/Doorbell=> Device Name: any name=> Password: dh888888

=> Save(Top right)

**** As a matter of best practice, advise customers to search and review playback every week, to ensure that HDD recording is working as expected, and remains unaffected by any issues.

Ref: 191029 DAHUA P2P setup